



ECO BEAUTY TILES - FITTING INSTRUCTIONS

REQUIREMENTS



- 1.The ECO BEAUTY tiles are better to be installed by a professional installer.
- 2.The sub-flooring should be clean,dry and no cracks.
- 3.The best installation temperature must be higher than 15 centi-degree and the relative humidity not higher than 80%.A room temperature between 18°C (65°F) and 25°C (77°F).

PREPARATIONS

- 1.Cutting tools: Shovel/Safety knife/Cutting knife/Trowel
- 2.Cleaning tools:Vacuum/Mop cloth/Shoe cover/Mop/Broom
- 3.Glue:PVC glue
- 4.Other tools:Sand/Heavy roller/Carpenter's ink market/floor rule

INSTRUCTIONS

- 1.Apply afterwards a self leveling compound, 24 hours prior to installation. This compound is then grinded and vacuum cleaned. Take heed, depending on the construction of the floor, of the allowed residual humidity and possible rising moisture.
- 2.Leave the ECO BEAUTY tiles 24 hours to acclimatize.
- 3.Measure the center of room and mark a line for the PVC glue application.Lay the ECO BEAUTY tiles on the wet glue and use the heavy roller to remove all air bubbles.As P1/P2

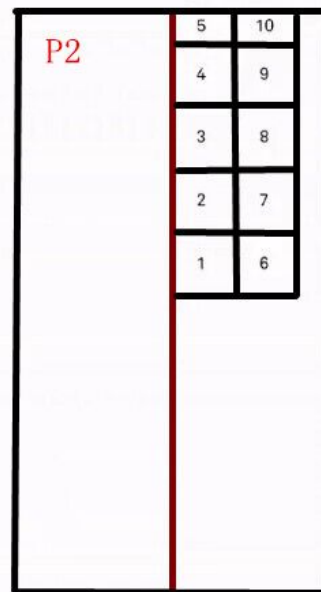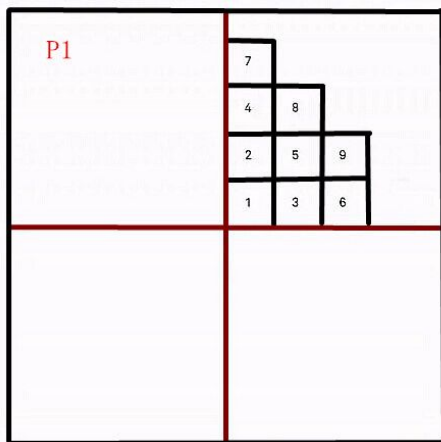

- 4.After some minutes,check the result.